


Multiboost

200L, 270L, 345L and 455L



Scan for Ball Cock
Performance Selection

1. Ball cock
2. Isolation valve with pressure gauge
3. Bypass isolation valve
4. Separate Multiboost overflow
5. Separate drip tray over flow
6. Multiboost drain off
7. Drip tray
8. Removable lid with pump & controller inbuilt

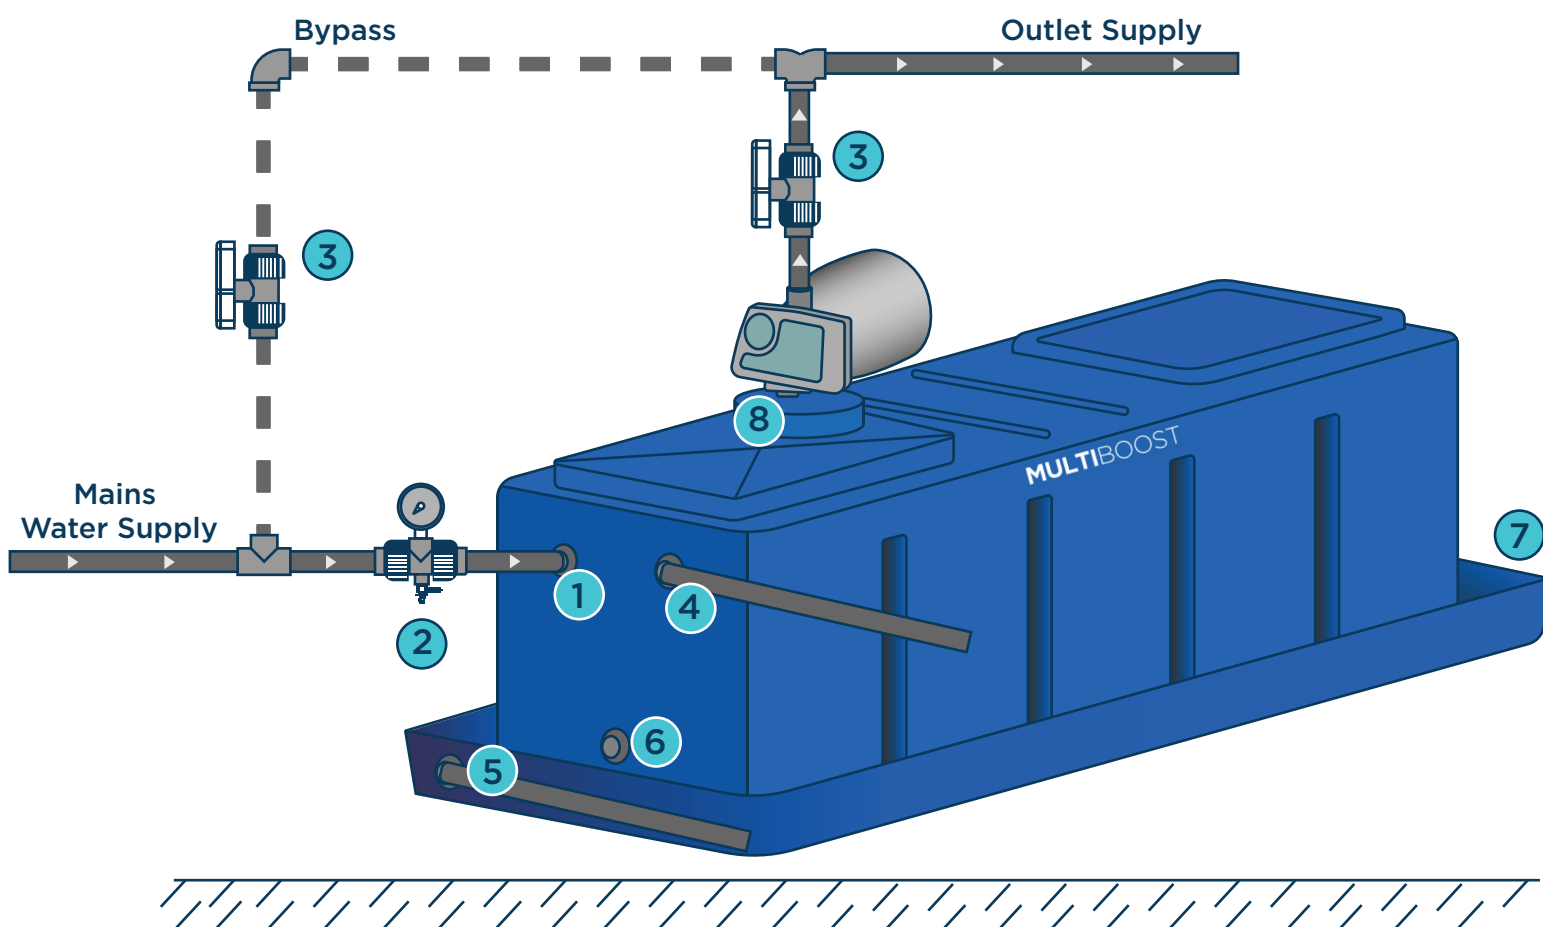

*EPS recommends the use of a drip tray and insulation jacket with every installation