


## Multiboost

200L, 350L, 450L, 750L

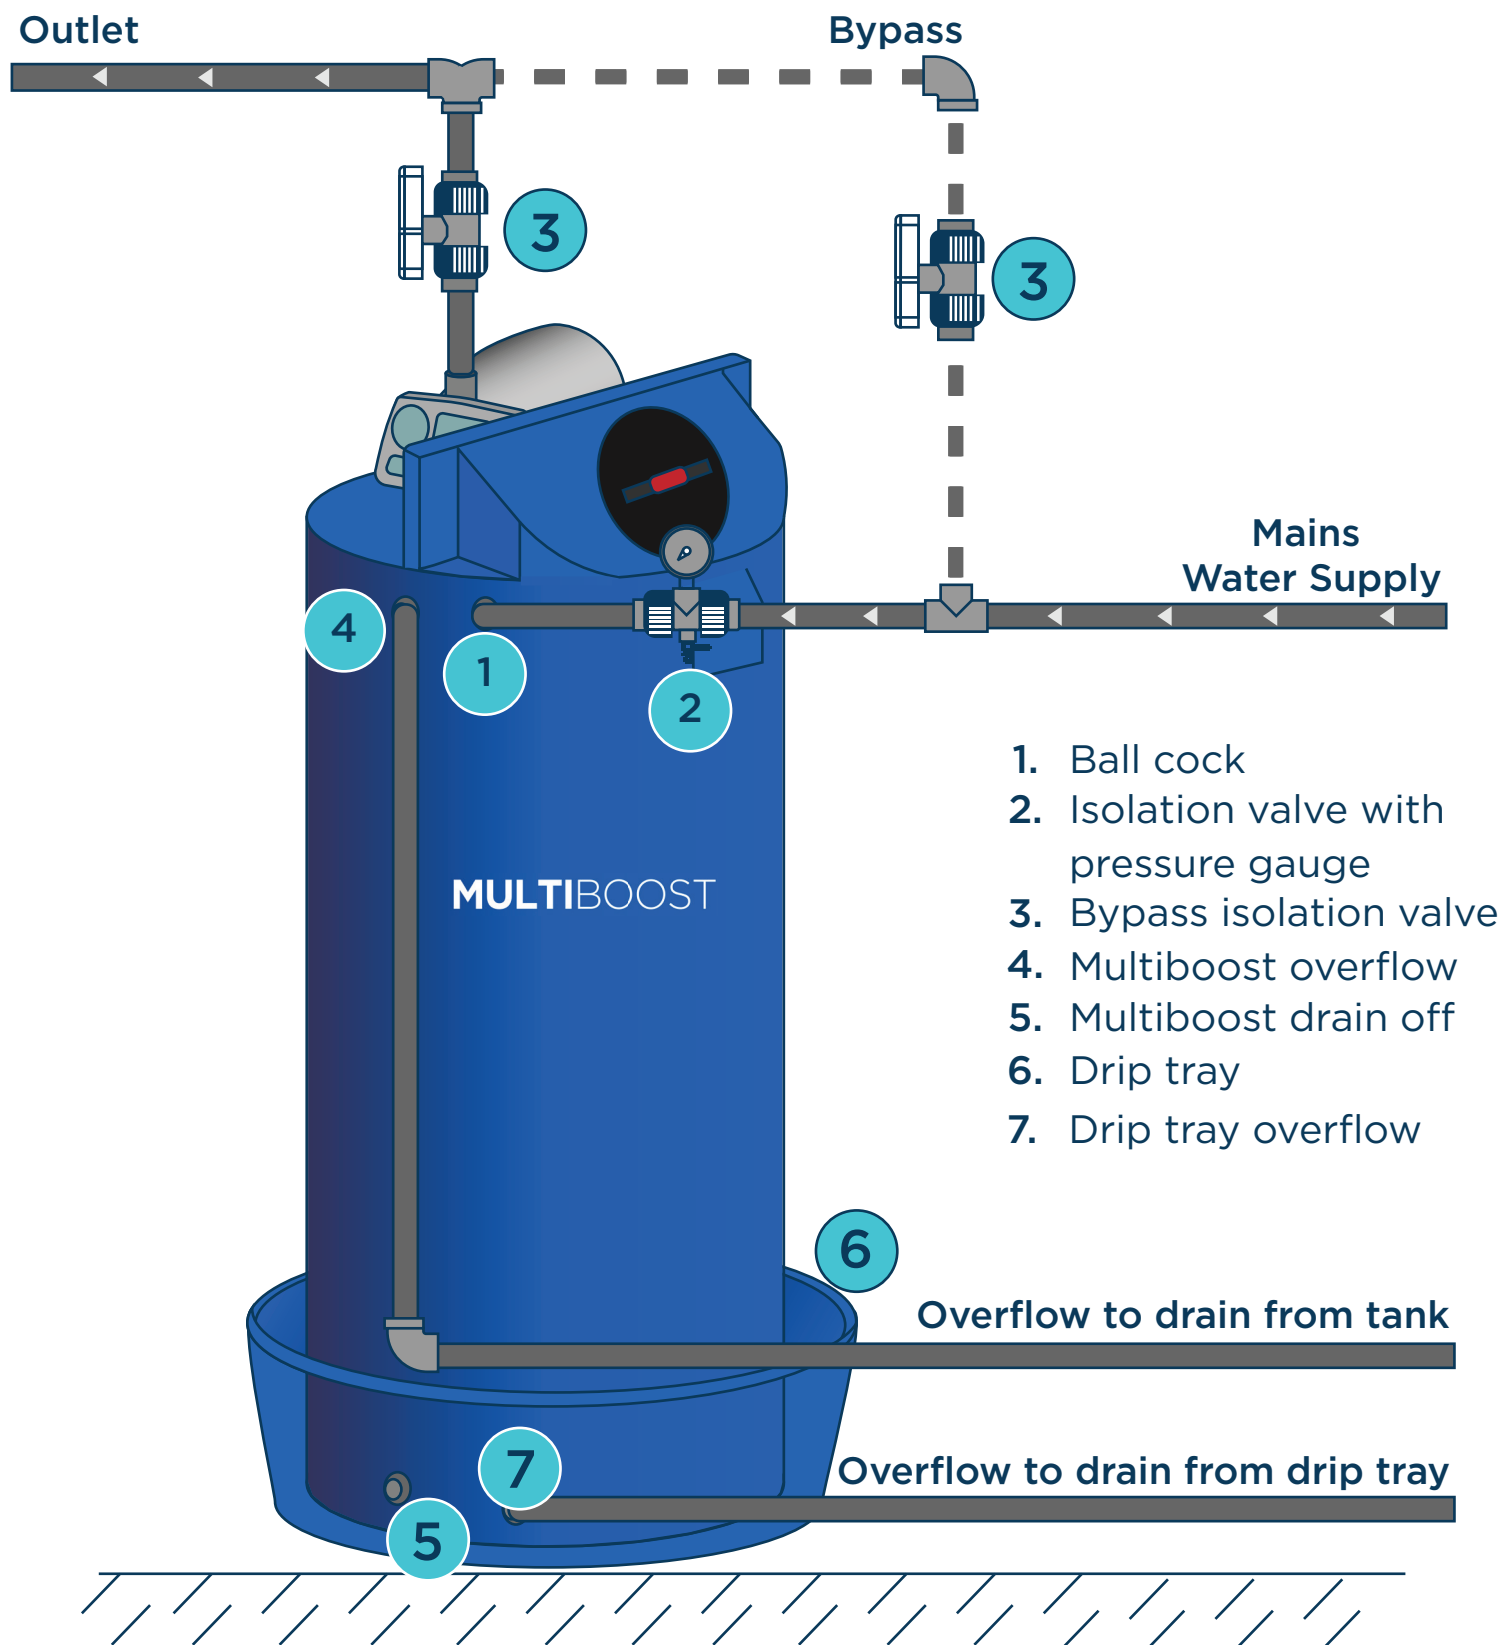

Scan for Ball Cock  
Performance Selection



\*EPS recommends the use of a drip tray and insulation jacket with every installation